



M Clayton	PREPARED
26/09/2017	DATE
V1	VER NO.
010003 2	PRODUCT CODE

Instruction Manual

For

IRiS Qube and Recordable Speaker Bundle



experia
multisensory for everyone

Experia
Acorn Phase 3, High Street
Barnsley, South Yorkshire
S72 7BD, United Kingdom

T 0800 612 6077
Einfo@experia-innovations.co.uk
Wwww.experia-innovations.co.uk

Instruction Manual

Congratulations on the purchase of your
IRiS Qube & Recordable Speaker Bundle!

PART ONE - The IRiS Qube

The IRiS Qube has been designed specifically for people with special needs and should, if used in accordance with these guidelines, offer years of switching learning and fun!

The IRiS Qube offers endless opportunities to develop numerous skills including colour recognition, cause and effect, hand to eye co-ordination, gross and fine motor skills and many more.

The IRiS Qube is an IRiS Talker and can control any number of IRiS Listeners.

Put simply, it is operated by turning the Qube over.

Please ensure you read this Instruction Manual in full before operating the unit.

Heed all warnings on the product and within this manual. If upon receipt of this product, the user suspects that the product is defective, and/or requires service or repair due to malfunction or damage to the product, please contact the manufacturer immediately. Please be aware that improper installation and/or use or misuse of this product may result in injury, death, or adverse reactions to its user. This product is intended to be installed and/or use by a trained professional. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended uses of the product.

Features

- IRiS Wirefree Compatible
- Brightly Coloured Sides
- Clear Sleeves
- Rugged
- Integral Battery
- Easy to use
- Available in 2 sizes
- 2 Year Manufacturers Guarantee (Collect and Return)

Instruction Manual

Getting Started

1. Simply turn the IRiS Qube over to use

Pairing to IRiS Listeners

This procedure is split into 2 sections, one for those who do not have an IRiS Master Pairer and for those who do.

Without an IRiS Master Pairer

Every IRiS Listener has a button on it called a pairing button. To get the IRiS Qube to work with a product, first decide which product you want to control then find the pairing button on that product and press it. You then need to turn the IRiS Qube over within 5 seconds. If correctly paired, the IRiS Listener will now change colour (if using a colour changing listener) to match that on the uppermost side of the Qube. The unit will now work with the IRiS Qube.

With an IRiS Master Pairer

To get the IRiS Qube to work with a product, first decide which unit you want to control and find its pairing button on the IRiS Master Pairer and press it. You then need to turn the IRiS Qube over within 5 seconds. The IRiS Listener will now change colour to that on the uppermost side of the Qube if correctly paired. The unit will now work with the IRiS Qube.

Cleaning and Maintenance

The unit should be cleaned with a damp soft cloth. A non-abrasive cleaning agent may be used for stubborn stains. Ensure no liquid enters the unit.

The unit has been designed for use by people with special needs however this does NOT mean it is unbreakable. You must ensure the unit is not stood upon, immersed in water, etc.

Troubleshooting the Qube

Q. The unit doesn't work.

A1. Is the unit paired to an IRiS Listener? If so, see A2

A2. Replace the batteries

A3. If the unit does not operate correctly after completing the above please contact us.

PART TWO - The IRiS Recordable Speaker

The IRiS Recordable Speaker has been designed specifically for people with special needs and should, if used in accordance with these guidelines, offer years of learning and fun!

The IRiS Recordable Speaker offers endless opportunities to develop cause and effect, speech and language skills and many more.

The IRiS Recordable Speaker is an IRiS Listener and can be controlled by any IRiS Talker.

Simply pair an IRiS Talker to the speaker and when the talker is activated the speaker will respond.

Please ensure you read and follow these Instructions carefully before installing or operating the unit. Please keep this manual for future reference.

Heed all warnings on the product and within this manual. If upon receipt of this product, the user suspects that the product is defective, and/or requires service or repair due to malfunction or damage to the product, please contact the manufacturer immediately. Please be aware that improper installation and/or use or misuse of this product may result in injury, death, or adverse reactions to its user. This product is intended to be installed and/or use by a trained professional. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended uses of the product.

Instruction Manual

Features

- IRiS Wirefree Compatible
- 18 hours of recording time
- 8 groups of pre-recorded sounds
- 2 groups of user recorded sounds
- 80 sounds available in total
- Easy to use
- 3 Year Manufacturers Guarantee (Return to base)

Pack contents

1 x IRiS Recordable Speaker

1 x 9v transformer

Sound Groups

0 - User recorded sounds

1 - User recorded sounds

2 - Domestic Animals

3 - Household Sounds

4 - Numbers One to Eight

5 - Favourite Colour - English

6 - Favourite Colour - Spanish


7 - Transport

8 - Circus

9 - Nursery Rhymes

Instruction Manual

Controls

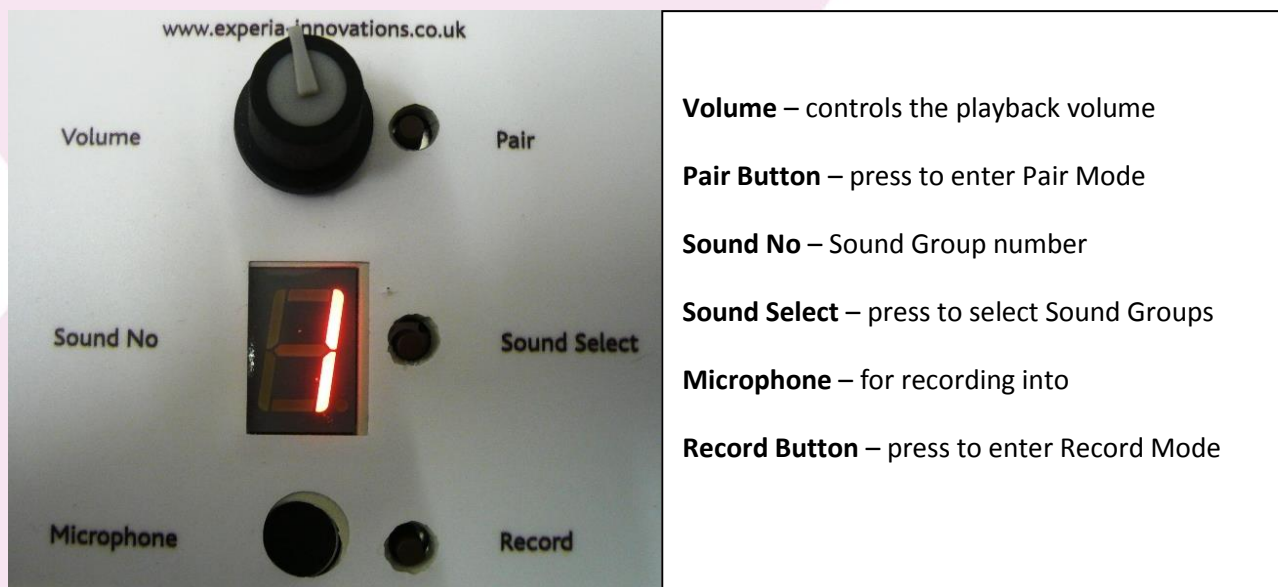

Getting Started

1. Connect the PSU supplied to a suitable mains outlet, and connect to the IRiS Recordable Speaker. Switch on the unit – the switch is on the right hand side of the unit.
2. Decide which IRiS Talker you want to control the unit and pair the unit to them – see 'Pairing to IRiS Talkers' section below. The Qube is the default setting.
3. Choose the group of sounds you'd like to hear by pressing the Sound Select button.
4. Now it's ready to use, activate the IRiS Talker and the speaker responds.

Pairing to IRiS Talkers

1. Turn the unit on.
2. Press the "Pair" button – the display flashes "P" to indicate Pairing Mode for 60 seconds.
3. Activate any IRiS talker within 60 seconds and the IRiS Speaker display will stop flashing "P" and return to the previous displayed Sound Group number. Pairing is now complete.
4. If the unit does not respond repeat steps 1 – 3.
5. If the unit continues to be unresponsive try changing the batteries in the IRiS Talker or pair to a different device.

Recording your own Sounds

After switching the unit on and pairing to an IRiS Talker, follow the instructions below to record a message onto the Recordable Speaker. Messages can be recorded over again and again. This is only relevant to Sound Groups 0 and 1. In this example we have paired the IRiS Recordable Speaker to the IRiS Qube.

1. Decide which colour on the Qube you want to record onto then ensure this is the uppermost side on the Qube.
2. Select Sound Group 0 or 1 and Press the “Record” button – the display flashes “r” to indicate Recording Mode for a few minutes until you continue the next step.
3. Activate the Qube with the desired colour facing up.
4. The unit will now begin recording – make the sound you want to match the face of the Qube. Once the sound has been recorded, activate the Qube once again to stop the recording. This may take a little practice to get right.
5. Activate the Qube by turning it over then turn back to the side you have just recorded onto. You will now hear the sound you have just recorded.
6. Continue to record onto the other sides of the Qube by repeating the above.
7. A single bar is displayed if no sound is available for playback.

Cleaning and Maintenance

The unit should be cleaned with a damp soft cloth. A non-abrasive cleaning agent may be used for stubborn stains. Ensure no liquid enters the unit.

The unit has been designed for use by people with special needs however this does NOT mean it is unbreakable. You must ensure the unit is not dropped, thrown, stood upon, immersed in water, etc.

Troubleshooting the Recordable Speaker

Q. The unit doesn't work.

A1. Is it switched on? If so, see A2

A2. Has the unit been paired to an IRiS Talker? If so, see A3

A3. Is the battery in the IRiS Talker fully charged? If so, please contact us.

Instruction Manual

Contact Details

For USA please email office@experia-usa.com

For Ireland please email support@experia-ireland.ie

For UK and rest of the world email support@experia-innovations.co.uk

Telephone: +44 (0) 845 644 0977.

Please note: email is our support teams preferred communication and this takes precedence over telephone calls.

QUESTIONS & IDEAS?

If you have an idea on how to improve this product or want to see your product idea realised, please email: ideas@experia-innovations.co.uk.

All ideas are presented to our OT, technical and finance department and if all procedures are passed we will contact you to discuss your idea further.

We can't promise to develop every product but if it's a great idea, we'll try!

Manufactured proudly in the UK by:

Experia, Acorn Phase 3, High Street, Grimethorpe, S72 7BD.



© Copyright 2017 Experia All rights reserved. Experia is a registered trademark