

M Clayton
26/09/2017
V1
010062 1

PREPARED
DATE
VER NO.
PRODUCT CODE



Instruction Manual

For

IRiS Colour Selector Deluxe



experia
multisensory for everyone

Experia
Acorn Phase 3, High Street
Barnsley, South Yorkshire
S72 7BD, United Kingdom

T 0800 612 6077
Einfo@experia-innovations.co.uk
Wwww.experia-innovations.co.uk

Instruction Manual

Congratulations on the purchase of your IRiS Colour Selector Deluxe!

The IRiS Colour Selector Deluxe has been designed specifically for people with special needs and should, if used in accordance with these guidelines, offer years of switching learning and fun!

The IRiS Colour Selector Deluxe offers endless opportunities to develop numerous skills including colour recognition, cause and effect, hand to eye co-ordination, gross and fine motor skills and many more.

The IRiS Colour Selector Deluxe is an IRiS Talker and can control any number of IRiS Listeners in a number of exciting modes.

Put simply, it is operated by pressing any of the switches.

Please ensure you read and follow these instructions carefully before installing or operating the unit. Please keep this manual for future reference.

Heed all warnings on the product and within this manual. If upon receipt of this product, the user suspects that the product is defective, and/or requires service or repair due to malfunction or damage to the product, please contact the manufacturer immediately. Please be aware that improper installation and/or use or misuse of this product may result in injury, death, or adverse reactions to its user. This product is intended to be installed and/or use by a trained professional. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended uses of the product.

Features

- IRiS Wirefree Compatible
- 8 Switching Modes for lifeskills development
- LCD Display
- 8 Brightly Coloured Rugged Switches
- Switch Input Sockets
- Wireless Charging
- No batteries to swap! It is wireless charging!
- Easy to use

Instruction Manual

Pack contents

- 1 x Colour Selector Deluxe
- 1 x Wireless Charging Pad
- 1 x USB Cable
- 1 x USB Power Supply
- 1 x Instruction Manual

Unpacking your Colour Selector Deluxe

- Check packaging for signs of damage before opening.
- Do not use sharp objects during unpacking.
- Check the parts received against the Pack Contents.
- Read the product manual before use.

Getting Started

The Colour Selector Deluxe is pre-charged before shipping so it should be ready to go (if not see the charging instructions later in this document).

Simply press any switch on the IRiS Colour Selector Deluxe – the unit will control the products it is paired to.

To pair the IRiS Colour Selector Deluxe to a product please see the 'Pairing to IRiS Listeners' section in this manual.

Using your own switches

Connect your own switches by plugging them into the sockets at the rear of the unit. The sockets are located in the same order as the colours on the top of the unit.

Instruction Manual

Modes of operation

The IRIS Colour Selector Deluxe features 8 switch modes; each designed to aid the development of basic life skills.

To change the switch mode simply press the button marked 'mode' on the side of the unit. Each time this button is pressed it moves to another mode.

Locked – Press any coloured switch. The listener changes to that colour and stays on that colour until a different switch is touched. The listener then changes to the new colour.

Toggle – Press any coloured switch, the listener changes to that colour. Press any coloured switch again and the light extinguishes.

Momentary – Press any coloured switch and any listener paired to the unit will change to that colour. The moment you stop pressing the switch, the light will extinguish.

Racing – This mode operates like a quiz buzzer. The first coloured button pressed illuminates the listener and stops any other switch action. After 5 seconds the colour extinguishes and it is ready to start again.

Passive – The listeners paired to the unit start slowly changing colour. Ideal for a relaxation session.

Timed – Press any coloured switch and any listener paired to the unit will change to that colour for a pre-set time. The time is fully adjustable by pressing the 'Time' switch on the unit. Each time you press the 'Time' switch the time increases. Times available are: 1, 2, 3, 4, 5, 10, 15, 20, 25, 30, 40, 50 and 60 seconds.

Scrolling Stop – The listeners paired to the unit start changing colour. When any switch is pressed they stop on the colour illuminated at that point. The listener stays on that colour for a present time. The time is fully adjustable by pressing the 'Time' switch on the unit. Each time you press the 'Time' switch the time increases. Times available are: 1, 2, 3, 4, 5, 10, 15, 20, 25, 30, 40, 50 and 60 seconds.

Scrolling Next – When any coloured switch is pressed the listeners paired to the unit will scroll to the next colour.

Pairing to IRiS Listeners

This procedure is split into 2 sections, one for those who do not have an IRiS Master Pairer and for those who do.

Without an IRiS Master Pairer

Every IRiS Listener has a button on it called a pairing button. To get the IRiS Colour Selector Deluxe to work with a product, first decide which product you want to control then find the pairing button on that product and press it. You then need to press any switch on the IRiS Colour Selector Deluxe within 5 seconds. The IRiS Listener will now change colour every time you press a button on the IRiS Colour Selector Deluxe, if correctly paired.

With an IRiS Master Pairer

To get the IRiS Colour Selector Deluxe to work with a product, first decide which unit you want to control and find its pairing button on the IRiS Master Pairer and press it. You then need to press any switch on IRiS Colour Selector Deluxe within 5 seconds. The IRiS Listener will now change colour every time you press a button on the IRiS Colour Selector Deluxe, if correctly paired.

Charging the IRiS Colour Selector Deluxe

1. Plug the USB lead into the wireless charging pad.
2. Plug the other end of the USB into the correct power supply.
3. Plug the power supply into a mains socket outlet and switch on at the mains. The charging pad LED should now light up.
4. Position the controller over the charging pad so the charging pad is underneath the centre.
5. The charging light on the controller should light up when it is correctly positioned over the charging pad.
6. Leave the controller charging until the LED turns off. Once the light goes off, the unit will be fully charged.

The battery takes approximately three and a half hours to fully charge from being fully discharged.

Instruction Manual

Cleaning and Maintenance

The unit should be cleaned with a damp soft cloth. A non-abrasive cleaning agent may be used for stubborn stains. Ensure no liquid enters the unit.

The unit has been designed for use by people with special needs, however this does NOT mean it is unbreakable. You must ensure the unit is not dropped, thrown, stood upon, immersed in water, etc.

Troubleshooting

Q. The unit doesn't work.

A1. When the unit is switched on, does the LCD display show text? No: see A2. Yes: see A3

A2. Has the unit been charged? If so, see A3

A3. If the unit does not operate correctly after completing the above, please contact us.

Q. The unit won't control any product.

A1. When a switch is pressed on the unit does the LCD display show text? Is it charged?

A2. Is the unit paired to an IRiS Listener? Try pairing the unit to another IRiS Listener, does this work? If not, please contact us.

Instruction Manual

Contact Details

For USA please email office@experia-usa.com

For Ireland please email support@experia-ireland.ie

For UK and rest of the world email support@experia-innovations.co.uk

Telephone: 0044 (0) 845 644 0977.

Please note: email is our support teams preferred communication and this takes precedence over telephone calls.

QUESTIONS & IDEAS?


If you have an idea on how to improve this product or want to see your product idea realised, please email: ideas@experia-innovations.co.uk.

All ideas are presented to our OT, technical and finance department and if all procedures are passed we will contact you to discuss your idea further.

We can't promise to develop every product but if it's a great idea, we'll try!

Manufactured proudly in the UK by:

Experia, Acorn Phase 3, High Street, Grimethorpe, S72 7BD.

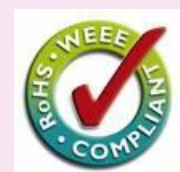

© Copyright 2017 Experia All rights reserved. Experia is a registered trademark