



Calming LED Bubble Tube

02 00 01

Product Manual

experia
multisensory for everyone

Experia
Acorn Phase 3, High Street
Barnsley, South Yorkshire
S72 7BD, United Kingdom

T 0800 612 6077
E info@experia-innovations.co.uk
W www.experia-innovations.co.uk

Congratulations on the purchase of your Calming LED Bubble Tube!

The Calming LED Bubble Tube has been designed specifically for people with special needs and should, if used in accordance with these guidelines, offer years of switching learning and fun!

The Calming LED Bubble Tube offers endless opportunities to develop numerous skills including colour recognition.

It is the brightest LED Bubble Tube currently available (at time of print) and produces multiple shades of colours.

Please ensure you read this Instruction Manual in full before operating the unit.

Features

- Ergonomic Design
- Latest LED Technology
- No Lamp Change – LED
- Clear Curved Lid
- Domed Base
- Low Voltage – transformer supplied
- Easy upgrade/maintenance
- Durable
- Easy to use
- 3 Year Manufacturers Guarantee (Collect and Return)

Pack contents

1 x Calming Bubble Tube
1 x Transformer
x USB lead
1 x Instruction Manual

Unpacking your Experia product

Check packaging for signs of damage before opening.
Do not use sharp objects during unpacking.
Check the parts received against the Pack Contents.
Read the product manual before use.

Getting Started

1. Place the bubble tube on a flat solid floor.
2. If the tube is over 60" high, secure the tube to a solid wall with a bubble tube bracket using the correct fixings for the wall type.
3. Carefully fill the bubble tube with water from the top. If you spill any water, please ensure this is cleaned immediately. Do not fill the tube to the top, allow a gap of 6 inches from the water level to the top of the tube.
4. Connect the round XLR connector from the Low Voltage transformer to the socket in the base of the bubble tube.
5. Connect the standard 3 pin mains plug to a mains outlet.
6. The unit will now illuminate and scroll through the standard colours.
7. Now its ready to use.


Please note: Only use the transformer supplied. Use of a different transformer may result in damage to the product and void the warranty.

For warranty information please see separate warranty card supplied.

Please ensure you read the section on cleaning and emptying.

Bubble Tube Accessories

There are a number of accessories available for your bubble tube.

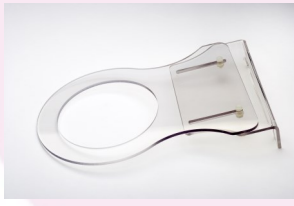

Experia Wall Bracket 02 00 03

If your bubble tube is over 1.5m tall then we recommend the use of a wall bracket.



Experia BCB treatment fluid 33 00 66

Recommended treatment fluid to keep your bubble tube healthy and clean



Experia Emptying Kit - foot pump 34 00 01

The best way to empty your bubble tube !



Experia Emptying Kit - drill pump 34 00 02

The quick way to empty your bubble tube



Experia Bubble Tube Fish 02 00 10

Cleaning and Maintenance

The unit should be cleaned with a damp soft cloth. A non abrasive cleaning agent may be used for stubborn stains. Ensure no liquid enters the base of the unit. The unit has been designed for use by people with special needs, however this does NOT mean it is unbreakable. You must ensure the unit is not hit with anything and that no one pulls or pushes the unit.

Changing Bubble Tube Water

All bubble tubes require the water in them changed every 4 weeks to slow the build up of any bacteria.

The best method of emptying a bubble tube is to siphon the water out. We recommend using a bubble tube emptying kit available from Experia. To help slow bacterial growth in your bubble tube, why not try using BCB liquid

Experia part number 33 00 06

Troubleshooting the bubble tube

Q. The unit doesn't work.

A1. Is it switched on? If so,

A2. Has the unit scrolled through its colours? If so,

A3. Please contact us.

Q. The tube water is green or smells.

A1. Change the water in the tube immediately by following the instructions in the 'Changing Bubble Tube Water' section above.

Technical Specifications

Product code – 02 00 01

Supply – 240vAC 100mA 50/60Hz

Load – 12vAC 5A Max

Only use the power supplies provided.

Guarantee

All products manufactured by ourselves are backed with a three year guarantee.

All other items carry a manufacturers 1 year guarantee.

All guarantees are collect and return.

If your product needs to be returned to our factory we will arrange collection of the item and return it to you when repaired, all we ask is you pack the product securely.

If in the unlikely event that a product purchased from us develops a fault please contact us on

Freephone 0800 612 6077 or [email us](#) and our technical team will assist

Experia Registered Office:

**Acorn Phase 3
High Street
Grimethorpe
S72 7BD**

If you have any questions or need information about any of our products and services please call us on

Freephone 0800 612 6077

If you would like a FREE Sensory Brochure you can request one by telephone or visiting our website.

For more information on Experia Free 3D Room Designs or to schedule an onsite visit from our sales team then please request a visit by telephone, email or by using the form on our website.

Support Contact Details

For USA please email support@experia-usa.com

For Canada please email support@experia-canada.com

For UK and rest of the world email support@experia-innovations.co.uk

Telephone: 0044 (0) 800 612 6077.

Please note: email is our support teams preferred communication and this takes precedence over telephone calls.

Manufactured in the UK by:

Experia, Acorn Phase III, High Street, Grimethorpe, Barnsley, South Yorkshire, S72 7BD



© Copyright 2015 Experia All rights reserved Experia. Experia is a registered trademark